

Технические характеристики на систему мониторинга температуры Moore Industries T2X-DWB

По вопросам продаж и поддержки обращайтесь:

Архангельск (8182)63-90-72
Брянск (4832)59-03-52
Вологда (8172)26-41-59
Иваново (4932)77-34-06
Калининград (4012)72-03-81
Киров (8332)68-02-04
Курск (4712)77-13-04
Москва (495)268-04-70
Нижний Новгород (831)429-08-12
Орел (4862)44-53-42
Пермь (342)205-81-47
Самара (846)206-03-16
Смоленск (4812)29-41-54
Тверь (4822)63-31-35
Тюмень (3452)66-21-18
Челябинск (351)202-03-61

Астана +7(7172)727-132
Владивосток (423)249-28-31
Воронеж (473)204-51-73
Ижевск (3412)26-03-58
Калуга (4842)92-23-67
Краснодар (861)203-40-90
Липецк (4742)52-20-81
Мурманск (8152)59-64-93
Новокузнецк (3843)20-46-81
Оренбург (3532)37-68-04
Ростов-на-Дону (863)308-18-15
Санкт-Петербург (812)309-46-40
Сочи (862)225-72-31
Томск (3822)98-41-53
Ульяновск (8422)24-23-59
Череповец (8202)49-02-64

Белгород (4722)40-23-64
Волгоград (844)278-03-48
Екатеринбург (343)384-55-89
Казань (843)206-01-48
Кемерово (3842)65-04-62
Красноярск (391)204-63-61
Магнитогорск (3519)55-03-13
Набережные Челны (8552)20-53-41
Новосибирск (383)227-86-73
Пенза (8412)22-31-16
Рязань (4912)46-61-64
Саратов (845)249-38-78
Ставрополь (8652)20-65-13
Тула (4872)74-02-29
Уфа (347)229-48-12
Ярославль (4852)69-52-93

T2X-DWB

Wall-Mount Room Air
Temperature Monitoring System

Description

The T2X-DWB Wall-Mount Room Air Temperature Monitoring System delivers the long-term stability of Moore Industries' T2X transmitter while being enclosed in a durable wall-mounted box. It can be used in a wide range of indoor temperature sensing applications.

The PC-programmable T2X-DWB has an internal 1000 ohm RTD for room temperature sensing. It provides a proportional 4-20mA output that is linear with temperature, and ready for direct interface with a monitoring and/or control system.

Figure 1. Installation Dimensions

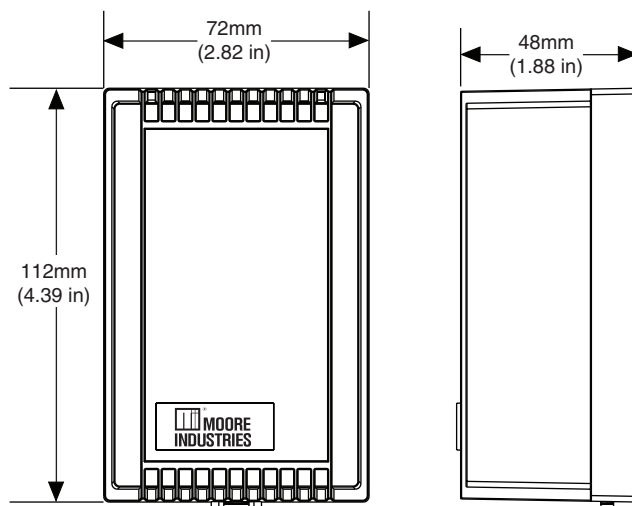


Figure 2. In just minutes, you can set up the T2X-DWB using our single window Intelligent PC Configuration Software.



The T2X-DWB mounts directly to a wall for quick and easy installation.

Features

- Mounts easily to a wall for simple installation.
- Sensor placement and vented housing design allow for maximum air flow.
- Sets up in a minute or less with single window Intelligent PC Configuration Software.
- Provides a proportional 4-20mA output that is ready for direct interface with a monitoring/control system.
- Independent input and output scaling capabilities.
- Full 3-year warranty.

Certifications



CE Conformant – EMC Directive 89/336/EEC
EN 61326

T2X-DWB

Wall-Mount Room Air
Temperature Monitoring System

Specifications

Performance	Input Accuracy: Platinum RTD, ±0.5°C (±0.9°F) Output Accuracy: Input Accuracy + 0.1% of output span NOTE: Overall accuracy is determined by combining input and output accuracy. It includes the combined effects of linearity, hysteresis, repeatability and adjustment resolution. It does not include ambient temperature effect. Calibration: Set at factory; sensor cannot be removed Stability (maximum span): 1 year = ±0.12% 3 years = ±0.21% 5 years = ±0.27% Measurement Cycle: Output updates at least 8 times per second Output Response Time: 256msec typical, 360msec	Performance (continued)	maximum, for the output to change from 10% to 90% for an input step change of 0% to 100% Over-Voltage Protection: Output, 48Vdc, maximum; Reverse Polarity, 48Vdc, maximum Digital Input Filter: User-selectable, 50/60Hz Power Requirement: 8-42Vdc Power Supply and Load Effects: Negligible within specified power limits Load Capability: 700 ohms@24V $\frac{\text{Supply Voltage} - 8V}{0.024A} = \text{Ohms}$ Burnout Protection: User-programmable, Upscale to 23.6mA; Downscale to 3.3mA RTD Lead Wire RTD Excitation: 250 microamps, ±10%	Ambient Conditions	Operating Range: -40°C to +85°C (-40°F to +185°F) Storage Range: -55°C to +105°C (-67°F to +221°F) Relative Humidity: 0-95%, non-condensing Ambient Temperature Effect: ±0.015% of span/°C change RFI/EMI Immunity: 10V/m@80-1000MHz, 1kHz AM when tested according to IEC 61326 with an error of 0.5% of span or less Noise Rejection: Common mode: 100dB@ 50/60Hz; Normal Mode: 70dB typical at 200mVp-p@50/60Hz Set Up All settings are made using Moore Industries' T2X-DWB PC Configuration Software, and then stored in nonvolatile memory Weight 113 g (4 oz)
--------------------	--	--------------------------------	--	---------------------------	--

Specifications and information subject to change without notice.

Table 1. Input Type and Ranges

Type	α	Ohms	Conformance Range	Maximum Range*	Minimum Span
Platinum	0.003850	1000	-200 to 300°C -328 to 572°F	-240 to 300°C -400 to 572°F	10°C 18°F

*Transmitter will measure ranges outside of the Conformance Range with some degradation to accuracy ratings.
Consult the factory for details.

Ordering Information

Unit	Input	Output	Power	Options	Housing
T2X Wall-Mount Room Air Temperature Monitoring System	PT10 Pt 3850 RTD, fixed 1000 ohm	Current Any range between 4-20mA	8-42DC ±10%	-VTD Standard Factory Calibration	DWB Decorative Wall Box

To order, specify: Unit / Input / Output / Power [Housing]
Model Number Example: T2X / PT10 / 4-20MA / 8-42DC [DWB]

Accessories

Each T2X-DWB order comes with one copy of our
Configuration Software (Windows® compatible) on CD
and one non-isolated configuration cable. To order
additional software or cables, refer to the chart.

Part Number	Part
750-75E05-01	T2X-DWB PC Configuration Software Program
803-039-26	Isolated Configuration Cable
803-040-26	Non-Isolated Configuration Cable

По вопросам продаж и поддержки обращайтесь:

Архангельск (8182)63-90-72
Брянск (4832)59-03-52
Вологда (8172)26-41-59
Иваново (4932)77-34-06
Калининград (4012)72-03-81
Киров (8332)68-02-04
Курск (4712)77-13-04
Москва (495)268-04-70
Нижний Новгород (831)429-08-12
Орел (4862)44-53-42
Пермь (342)205-81-47
Самара (846)206-03-16
Смоленск (4812)29-41-54
Тверь (4822)63-31-35
Тюмень (3452)66-21-18
Челябинск (351)202-03-61

Астана +7(7172)727-132
Владивосток (423)249-28-31
Воронеж (473)204-51-73
Ижевск (3412)26-03-58
Калуга (4842)92-23-67
Краснодар (861)203-40-90
Липецк (4742)52-20-81
Мурманск (8152)59-64-93
Новокузнецк (3843)20-46-81
Оренбург (3532)37-68-04
Ростов-на-Дону (863)308-18-15
Санкт-Петербург (812)309-46-40
Сочи (862)225-72-31
Томск (3822)98-41-53
Ульяновск (8422)24-23-59
Череповец (8202)49-02-64

Белгород (4722)40-23-64
Волгоград (844)278-03-48
Екатеринбург (343)384-55-89
Казань (843)206-01-48
Кемерово (3842)65-04-62
Красноярск (391)204-63-61
Магнитогорск (3519)55-03-13
Набережные Челны (8552)20-53-41
Новосибирск (383)227-86-73
Пенза (8412)22-31-16
Рязань (4912)46-61-64
Саратов (845)249-38-78
Ставрополь (8652)20-65-13
Тула (4872)74-02-29
Уфа (347)229-48-12
Ярославль (4852)69-52-93

Эл. почта: mpr@nt-rt.ru || Сайт: <http://moore.nt-rt.ru/>